


MILR010002N

MANUAL

Mueller

PROFESSIONAL STEAM IRON

 PRECISION STAINLESS
STEEL SOLEPLATE

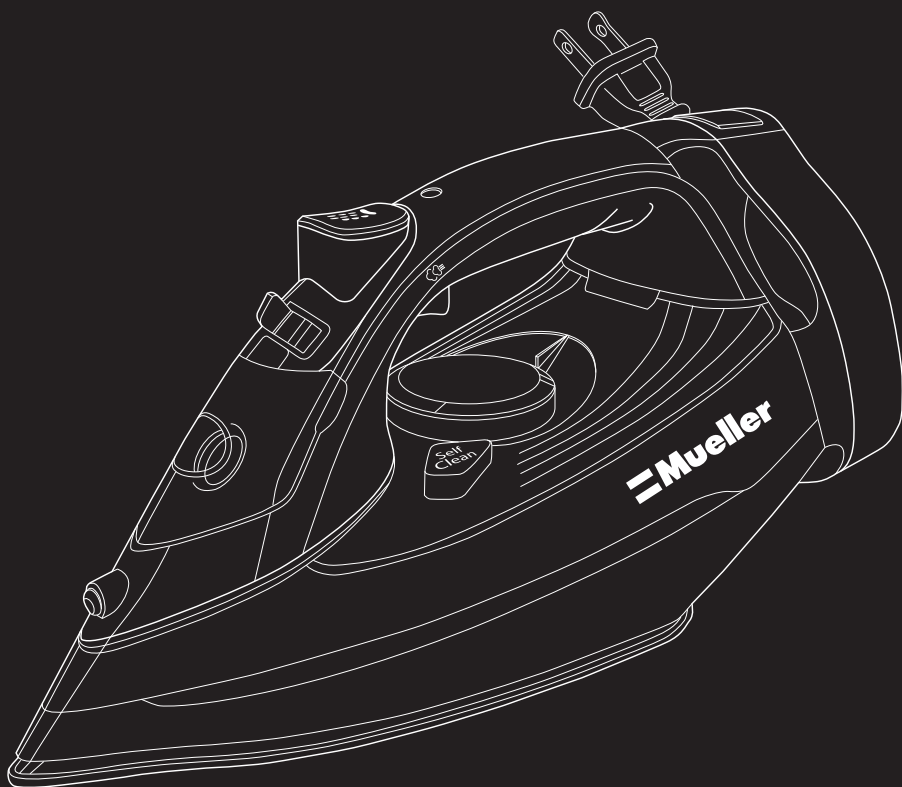

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

READ ALL INSTRUCTIONS BEFORE USING:

- Make sure that the voltage indicated on the rating plate of the appliance corresponds to your outlet voltage.
- Do not use the appliance for anything other than its intended use.
- To protect against a risk of electric shock, do not submerge the Steam Iron in water or any other liquids.
- The Steam Iron should always be turned to Minimum (Min) before plugging or unplugging from the outlet. Always grasp the power plug to remove it from the wall outlet. Do not pull on the Power Cord itself.
- Do not allow the cord to touch hot surfaces. Let Steam Iron cool completely before putting it away. Loop cord loosely around the Steam Iron when storing.
- Always disconnect Steam Iron from the electrical outlet when filling with water, emptying or when not in use.
- Do not operate Steam Iron with a damaged cord; do not operate if the Steam Iron has been dropped or damaged. To avoid the risk of electric shock do not disassemble the Steam Iron. Instead take it to a qualified service place for examination and repair. Incorrect reassembly can cause a risk of electric shock when the Steam Iron is used.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervisions or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary for any appliance being used near children.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn our Steam Iron upside down – there may be hot water in the reservoir.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a 10 A cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

More specifically:

- Do not leave the hot Steam Iron touching fabrics or very flammable surfaces.
- Do not leave Steam Iron unattended while connected to the power outlet, and/or if Soleplate is hot. Do not leave the Steam Iron unattended when on an ironing board.
- Never touch the appliance with wet or damp hands.
- Do not leave the appliance exposed to rain, sun, etc.
- Do not fill the reservoir with water while the Iron is plugged in the outlet.

⚠ WARNING!

 
Stop using this Iron if you notice leaking, overheating, smoking, or burning odor. Please disconnect the power immediately, and check the valid warranty service.

⚠ PLEASE NOTE!

Do not use chemical additives, scented substances, or decalcifiers. Failure to follow with manufacturer recommendations will void your warranty.

SAVE THESE INSTRUCTIONS

■ PARTS OVERVIEW

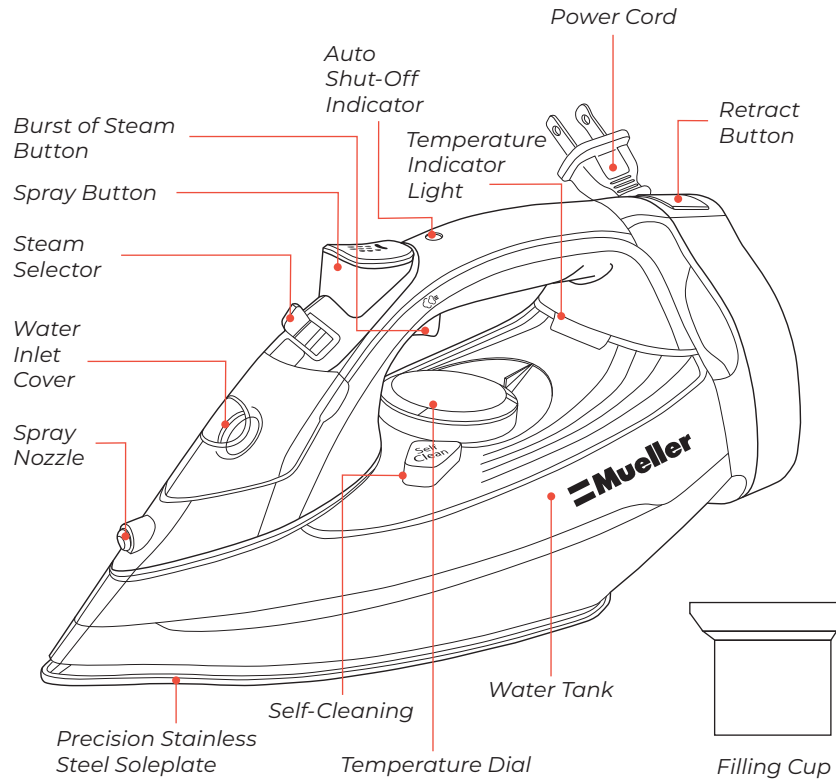


■ BEFORE USE

- Please read the instructions and the “Important Safety Instructions” carefully.

NOTE: Remove the transparent Soleplate protective foil.

 - It is normal for a small amount of smoke to be produced the first time the Steam Iron is used. This will quickly disappear.
- To avoid damage to clothes from dust or dirt that may collect in the Steam Iron: before the first use or after the Steam Iron has been stored for some time, first iron an old cloth, testing both the “Spray” and the “Burst Of Steam” features.

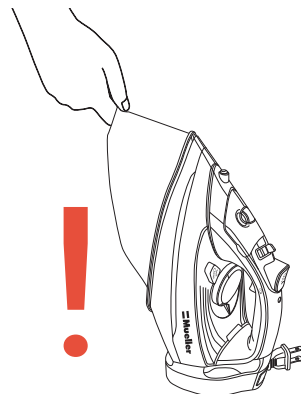

■ ANTI-CALC SYSTEM



A special resin filter inside the Water Tank softens the water and prevents scale build-up in the plate. The resin filter is permanent; it does not need replacing.

⚠ PLEASE NOTE!

Mueller irons are designed to use a **REGULAR TAP WATER** (up to 12 grains of hardness). If your water is harder than this, we recommend mixing tap water with distilled water (1:1 ratio), which reduces the hardness; or just use inexpensive bottled water.

Do not use chemical additives, scented substances, or decalcifiers.

■ ANTI-DRIP SYSTEM



 
With the Anti-Drip system, you can perfectly iron even the most delicate fabrics.

Always iron delicate fabrics at low temperatures. The plate may cool down to the point where no more steam comes out, leaving drops of boiling water that can leave marks or stains on the fabric. In these cases, the Anti-Drip system automatically activates to prevent vaporization, so that you can iron the most delicate fabrics without risk of spoiling or staining them.

■ AUTOMATIC SHUT-OFF





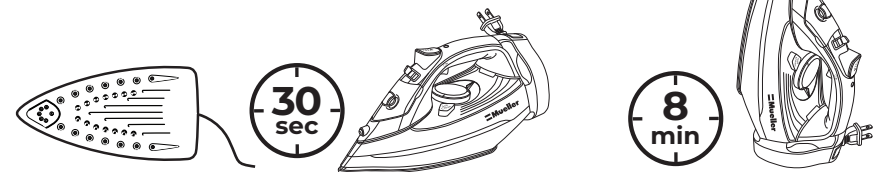

The Auto Shut-Off indicator will automatically show a flickering green light if the Steam Iron is tipped over or placed horizontally for more than 30 sec or vertically for 8 min. In this case, the Steam Iron will produce a warning sound and will automatically switch off.



As soon as you move the Steam Iron, the Auto Shut-Off will turn off and the Steam Iron will start working again.

■ PREPARATIONS


Sort the laundry to be ironed according to the international symbols on the garment label, or if this is missing, according to the type of fabric.

Laundry Label	Fabric	Temperature Setting	Soleplate Temperature
	synthetics e.g. viscose, polyester	●	158~248°F (70~120°C)
	silk, wool	● ●	212~320°F (100~160°C)
	cotton, linen	● ● ●	248~455°F (140~235°C)
	Do not iron	/	/

To save time, start ironing garments requiring a low temperature. This reduces the waiting times (the Steam Iron takes less time to heat up than to cool down) and eliminates the risk of scorching the fabric.

 
■ STEAM IRONING

Filling With Water

- Check that the plug is disconnected from the socket.
- Move the Steam Selector to .
- Open the Water Inlet Cover.
- Hold the Steam Iron at an angle (~60°) and flip open the Water Inlet Cover. Fill the Water Tank with water (containing no additives) to the "MAX" water level mark using the provided Filling Cup, and close the cover.


NOTE:


- If you need to add water during ironing, UNPLUG the Power Cord from the outlet and repeat the above steps.
- Ensure the Steam Iron is fully reheated after filling.

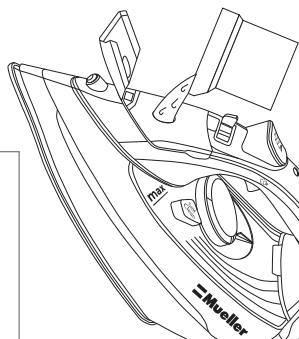

Selecting the Temperature

 - Place the Steam Iron on an even and stable surface on its heel rest.
- Insert the Power Cord into an electric power socket.
- Adjust the Temperature Dial according to the international symbol on the garment label (see chart at left). The Temperature Indicator Light indicates that the Steam Iron is heating up. Wait until the Temperature Indicator Light goes off before ironing.

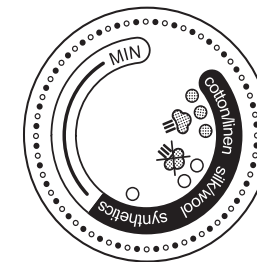


NOTE: The Temperature Dial does not adjust the amount of steam. Also, steam will only work at the specified temperature settings when set to ● ● ● or .

⚠ WARNING!


During ironing, the Temperature Indicator Light comes on at intervals, indicating that the selected temperature is maintained. If you lower the thermostat temperature after ironing at a high temperature, do not start ironing until the Temperature Indicator Light turns on again.

Selecting the Steam

 - The amount of steam is regulated by the Steam Selector.
- Move the Steam Selector to a position between minimum and maximum depending on the quantity of steam required, and the temperature selected.

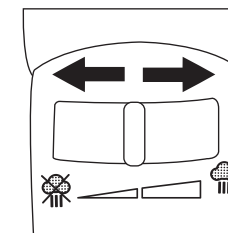


⚠ WARNING!

The Steam Iron gives off steam continuously only if you hold the Steam Iron horizontally. You can stop the continuous steam by placing the Steam Iron in a vertical position or by moving the Steam Selector to . As indicated on the Temperature Dial you can only use steam at the highest temperatures. If the selected temperature is too low, water may drip onto the plate.

Choose “Burst of Steam” Instead of Continuous Steam When Ironing Vertically

Press the “Burst of Steam” button once to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again.

 IRONING VERTICALLY: Use the “Burst Of Steam” button to iron curtains, hanging garments, etc.

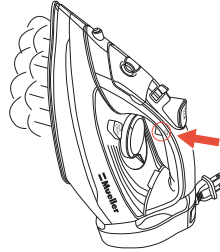


⚠ WARNING!

The “Burst Of Steam” function can only be used at high temperatures. Stop the steaming when the plate temperature control light comes on then start ironing again only after the light has gone off.

⚠ WARNING!

To avoid scald injury, do not touch the heating Soleplate or hot steam when using the Iron.

 
■ DRY IRONING

To iron without steam, follow the instructions in “Steam Ironing” (See ▶ Page 6) leaving the “Burst of Steam” button on position .

Spray Function

Make sure that there is water in the Water Tank.

Press the “Spray” button down slowly for a jet or press quickly and firmly for a mist.

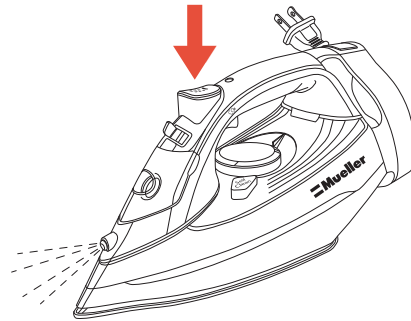

NOTE: Do not use the “Spray” function on silk and synthetics. Ensure the Steam Iron is fully reheated after filling.

 
■ CLEANING

- Before cleaning the Steam Iron, make sure that the appliance plug is not connected to the electric outlet.
- Any deposits or starch residue left on the plate can be removed using a damp cloth or an unabrasive liquid detergent.
- Avoid scratching the plate with steel wool or metal objects.
- Clean the plastic parts with a damp cloth then wiped over with a dry cloth.

Self-Cleaning Button

The “Self-Cleaning” feature cleans inside the Soleplate, removing scale and impurities. We recommend using it every 10–15 days.

- Fill the Water Tank to the maximum level and set the Steam Control switch to OFF.
- Set the Temperature Dial to the maximum and wait for the Temperature Indicator Light to turn off.
- Pull the plug out of the socket and hold the Steam Iron horizontally over the sink.
- Hold the “Self-Cleaning” button until all the boiling water, steam, impurities and scale come out of the Soleplate.

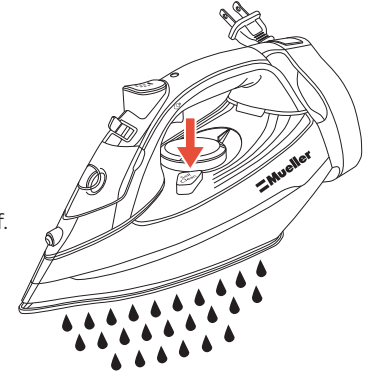

⚠ BE CAREFUL!

Water might be hot so keep it away from any skin exposed areas.

■ STORAGE

- Make sure the Steam Iron is disconnected from the outlet.
- Let the Steam Iron cool down completely.
- Empty the Water Tank by turning the Steam Iron upside down over the sink, and gently shaking it.
- Roll up the Power Cord using the “Retract” button.
- Store the Steam Iron, in a vertical position, in a cool and dry place.

■ ADVICE FOR GOOD IRONING

We recommend using the lowest temperatures with fabrics that have fine finishes (sequins, embroidery, flush, etc.).

If the fabric is mixed (e.g., 40% cotton 60% synthetics), set the Temperature Dial to the temperature of the fiber requiring the lower temperature.

If you don't know the composition of the fabric, test the temperature on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.

Never iron areas with traces of perspiration or other marks: the heat of the plate will make the stain “stick” to the fabric, making them irremovable.




To avoid leaving a burn mark on silk, woolen or synthetic garments, iron them inside out.

Velvet garments can be handled by ironing in one direction (following the fiber). Do not press down on the Steam Iron.

It is easier to iron fabrics if they are not completely dry. For example, silk should always be ironed damp.

■ IRON TROUBLESHOOTING

Problem	Possible Cause	Solution
Steam Iron is leaking	DISTILLED WATER	DO NOT use 100% pure distilled water, use tap water. In very hard water areas mix half tap water with half distilled to reduce hardness; or use inexpensive bottled spring water.
Steam Iron is leaking	SOFTENED WATER	Most softened water is alright, but if you experience leaks or spitting, change to untreated tap water or inexpensive bottled spring water. DO NOT use 100% distilled water.
	Auto-Off activated? Overuse of burst of steam	Move Steam Iron or gently shake. Allow more time between each burst.
Steam Iron won't heat	Is Steam Iron plugged in?	Make sure the plug is in the socket.
	Temperature Dial set too low? Auto-Off activated?	Turn Temperature Dial higher. Move Steam Iron or gently shake.
Temperature Indicator Light turns OFF and ON intermittently	This is normal	The Temperature Indicator Light will turn from ON to OFF intermittently, indicating that the selected temperature is being maintained.

Steam Iron does not steam	Steam Iron is not hot enough	If the Steam Iron is not hot enough, the Anti-Drip system will activate and stop the iron's steam production. Set thermostat to the ●●● position. Always allow sufficient time for the Steam Iron to heat up (indicator light turns OFF) before activating the Steam Control switch.
	Steam valve is clogged	Move the Steam Selector from min to max several times to clear blockage.
Steam Iron does not steam	The “Burst of Steam” Button requires specific settings	“Burst of Steam” function works when the Steam Selector is switched to  and the Temperature Dial is set to ●●● or  . Continuous steam function only works when the Temperature Dial is set to ●●● or  .

■ SPECIFICATIONS

Model Number	Voltage	Power	Soleplate Temperature	Cord
MU-77X	120 V 60 Hz	1500 W	158~455°F (70~235°C)	8 ft (243.8 cm)

■ 1-YEAR LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for one year from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.

If there is any problem with Mueller Professional Steam Iron, please contact Customer Service.

MUELLERDIRECT.COM
SUPPORT@MUELLERDIRECT.COM
888-632-9981



PROFESSIONAL STEAM IRON

PRECISION STAINLESS
STEEL SOLEPLATE

SKU: MLR010002N

MADE IN CHINA

HAPPINESS IS HOMEMADE

MUELLERDIRECT.COM
SUPPORT@MUELLERDIRECT.COM
888-632-9981

37 E 18TH STREET
NEW YORK, NY 10003
UNITED STATES