

MLR010020N

MANUAL

# Mueller

## ULTRA GLASS KETTLE

HIGH QUALITY BOROSILICATE GLASS





# ■ IMPORTANT SAFETY INSTRUCTIONS

**Before using the electrical appliance, the basic precautions below should always be followed:**

- Read all instructions and save them for future reference.
- Check that the voltage marked on the appliance rating plate matches your local supply. For additional protection, we recommend the use of a power outlet with a rated current of 10 amps. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not use an extension cable, it may result in fire, electric shock, and/or personal injury due to a tripping hazard.
- This appliance is intended for indoor household use only. Do not use this appliance for any purpose other than its intended use. Any other use may invalidate the warranty or may result in serious injury or harm.
- Do not touch hot surfaces. Use the Handle. Surfaces will get hot during operation.
- Do not use the appliance if the plug, the mains cord, the base, or the appliance itself is damaged.
- Do not leave the appliance unattended when in use.
- This appliance is not intended for use by any individual (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, without proper supervision or instruction from an adult or individual responsible for their safety and care.
- Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electrical shock, and personal injury, do not immerse the appliance in water or any other liquids.
- Place the appliance on a flat surface. Do not hang the power cord over the edge of a table or counter. Do not let the cord hang over the edge of a table or counter, touch hot surfaces, or become knotted. Ensure the power cord does not touch the hot surface of the appliance.
- Do not place it on or near a hot gas or electric burner, or on the top of another electrical appliance, or near an open flame.
- Always turn appliance off at the power switch and remove the plug from outlet before attempting to move the appliance when not in use, when no water is in the Kettle, or when filling water.
- Remove the power plug from the wall outlet before cleaning or when not in use. Allow the appliance to cool down completely before cleaning the appliance.
- Always grasp the power plug to remove it from the wall outlet. Do not pull on the power cord itself.
- Do not try and repair on your own. If the plug is damaged, it must be replaced by the manufacturer to avoid a hazard.
- Steam heat can cause burns. Use extra caution when opening the Lid immediately after the water has boiled. The steam coming out of the Kettle is very hot.
- Do not use the Kettle to heat anything other than water. Do not operate the appliance without water.
- Do not fill the Kettle beyond the maximum level indication. Do not operate the Kettle if the water is below the minimum level (usually 16.9 oz / 0.5 L).

- Do not fill the Kettle when positioned on the Power Base. Dry any water on the bottom of the Body before placing the Kettle onto the Power Base.
- This Kettle is to be used with the supplied base only.
- We recommend cleaning the washable nylon filter periodically.
- Do not insert any object into the slots or holes of the Kettle.
- Do not touch the Power Base or bottom of the Kettle after use to avoid scalding or burns.
- Do not remove the Lid during the heating cycle. Scalding may occur. Never operate the appliance when the Lid is open or removed.

### **CAUTION!**


Ensure that the Kettle is switched off before removing it from the Base. Do not fill Kettle beyond max fill line. If the Kettle is overfilled, boiling water may eject from the Kettle and cause scalding. Do not immerse the Kettle, or its plug, in water or any other liquids. Do not wash the Kettle and its parts in a dishwasher; wash the Kettle by hand with mild soap and water.

### **WARNINGS!**

- ▲ Do not use this appliance within reach of a bath or sink, or any vessel containing water or other liquids.
- ▲ Close the Lid until a click is heard so that steam is directed away from the Handle.
- ▲ Do not press the Lid Release Button to open the Lid while the water is boiling.
- ▲ If the appliance is dropped in water, do not reach for it. Switch it off at the outlet, then disconnect it from the electric outlet. Drain the water before retrieving the appliance. Stop using the appliance until it has been checked by a qualified service agent.
- ▲ To reduce the risk of fire or electrical shock, do not repair the appliance by yourself. Do not remove the bottom of the Body or the Power Base by yourself.
- ▲ Do not remove the Lid while the water is boiling.

**SAVE THESE INSTRUCTIONS**

# ■ PARTS LIST

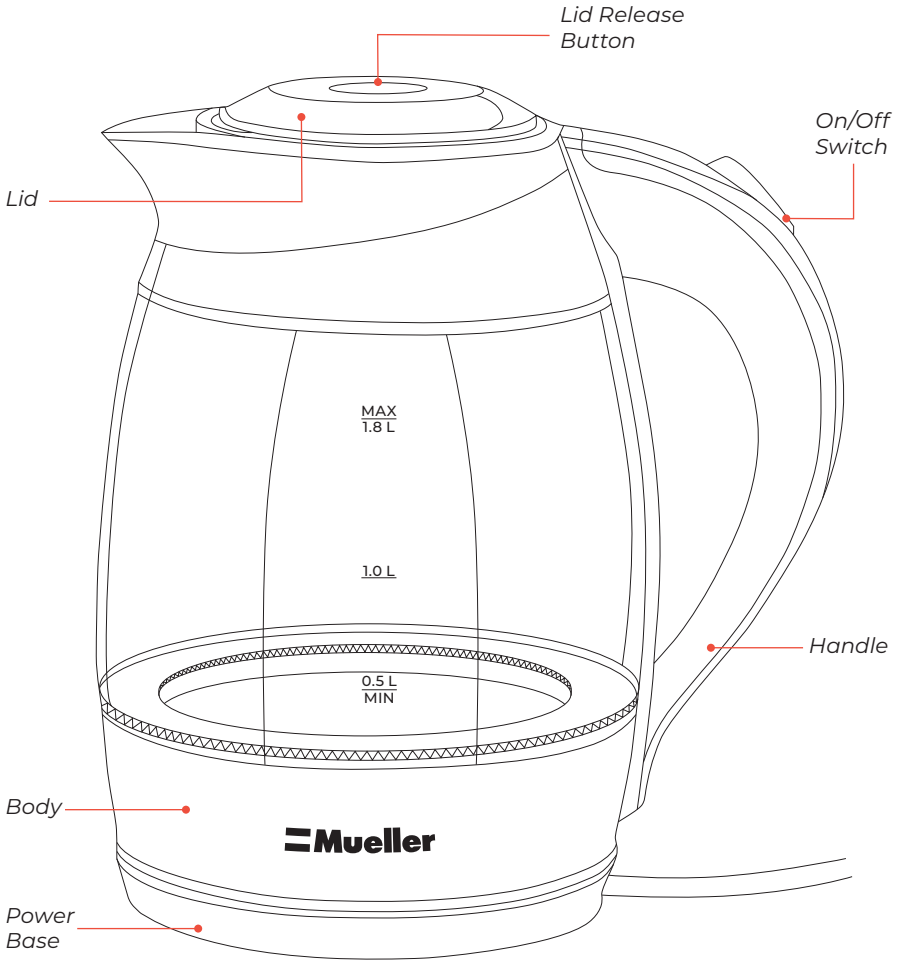

## ■ BEFORE FIRST USE

### IMPORTANT!

Check that the product is free of damage. Before making hot water to consume, fill the Kettle with fresh water to the maximum level. Boil the water following the instructions. Pour out the hot water and rinse the Kettle once more.

### Water Amounts

- Minimum: 16.9 oz (0.5 L)
- Maximum: 60.9 oz (1.8 L)

### Automatic Switch-Off Protection

This Kettle is equipped with boil-dry protection. If it is accidentally switched on without water in it, the Kettle will automatically switch off. The LED indicator will go off.

## ■ INSTRUCTIONS

- 1 With the power off, remove the Kettle from its Power Base.
- 2 To open the Lid, press the Lid Release Button. Fill the Kettle with the desired amount of fresh water through the open Lid.
- 3 Close the Lid and place the Kettle on the Power Base.
- 4 Insert the plug into the power socket. Push the On/Off Switch on the Handle to "I" (On). The Kettle will begin heating and blue LED lights will illuminate.
- 5 The Kettle will automatically switch off when the water boils. The switch will reset to "O" (Off) and the blue LED lights will turn off.

## ■ CLEANING INSTRUCTIONS

### Cleaning the Removable Filter

- 1 Lift up to remove the nylon filter from the Kettle Spout.
- 2 Wash the filter with clean water cloth.
- 3 Dry the filter thoroughly before replacing it in the Kettle.

**NOTE:** A filter holder secures the washable filter in place. Gently push up on the filter to remove it from the frame. Use the reverse process to reinsert the filter.

# ■ DESCALING INSTRUCTIONS

## Descaling the Kettle

- 1 With the power off, remove the Kettle from its Power Base.
- 2 Open the Lid with the Lid Release Button. Fill the Kettle with a solution of 16.9 oz (0.5 L) white vinegar and 40.6 oz (1.2 L) clean water.
- 3 Leave the solution in the Kettle for 1 hour.
- 4 Empty the solution.
- 5 Fill the Kettle with clean water.
- 6 Boil, then discard the water. Repeat one more time before consuming boiled water.
- 7 If scale is still present in the Kettle, repeat steps 1–6.

### **WARNING!**

- ▲ Always unplug the appliance from the power outlet and allow it to cool down before cleaning.
- ▲ Do not use chemical, steel wool, or abrasive cleaner to clean the appliance.
- ▲ The Kettle and its parts cannot be washed in a dishwasher.

# ■ SPECIFICATIONS

Rated Voltage	Power	Capacity
AC 110–120 V, 50/60 Hz	1250–1500 W	60 oz (1.8 L)

# ■ 1-YEAR LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for one year from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.



**ULTRA GLASS KETTLE**

HIGH QUALITY BOROSILICATE GLASS

SKU: MLR010020N

PRINTED IN CHINA

---

**HAPPINESS IS HOMEMADE**

MUELLERDIRECT.COM  
SUPPORT@MUELLERDIRECT.COM  
888-632-9981

37 E 18TH STREET  
NEW YORK, NY 10003  
UNITED STATES