


MANUAL ——— MLR010560N | MLR010561N | MLR010562N

# MuellerLiving™

## DESIGNER COFFEE GRINDER

QUICKLY GRIND FRESH COFFEE

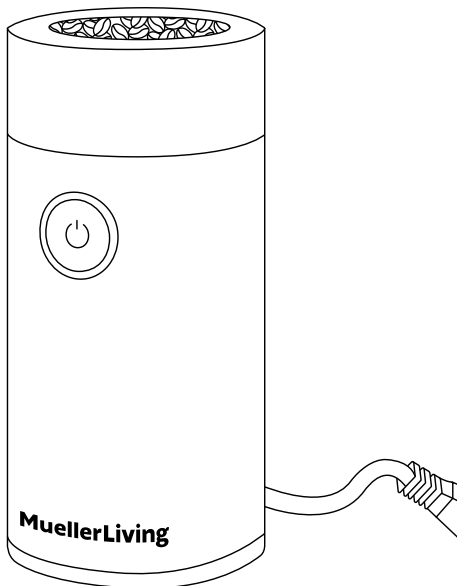

## ■ WARNINGS

- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised by an adult responsible for their safety.
- This is not a toy. Keep the appliance and its cord out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- This appliance is designed for household use only.
- If the supply cord or plug is damaged, do not operate it.

### **⚠ CAUTION!**

**Do not immerse the unit in water.  
To protect against electrical shock, do not  
put any parts in water or other liquid.**


# IMPORTANT SAFETY INSTRUCTIONS

- Before using the product, please read carefully and always comply with the instructions. The manufacturer is not responsible for any damages or injuries resulting from improper use of the product.
- The product is only to be used indoors.
- Do not use the product for any purpose that is not compatible with its application.
- Check hopper for presence of foreign objects before using.
- Avoid contacting moving parts. Do not remove the transparent window lid while the grinder blades are in motion.
- During grinding, if the coffee stops spinning, shake the grinder while holding the lid closed.
- Inspect blade and blade assembly before and after use. If damaged, do not use and contact Manufacturer or authorized repair facility for assistance.
- Do not grind more than 1.8 oz (50 oz) of coffee. Before grinding the next batch of coffee, wait 30 minutes to cool down the mill.
- The applicable voltage is 120 V~ 60 Hz. For safety reasons, it is not appropriate to connect multiple devices to one power outlet.
- Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, or when it is left unattended, remove plug from outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Always disconnect the appliance from the power supply before assembling, disassembling, or cleaning it.
- Inspect the power cable before each use. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defective product yourself because it can lead to electric shock. Any repair that was done incorrectly can cause hazardous situations for the user.
- If the power cable or plug is damaged, the product should be returned to the manufacturer, its service agents, or similarly qualified persons.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug should fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. Do not let cord hang over edge of table or counter or touch hot surfaces.
- To provide additional protection, it is recommended to install Residual Current Device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact a professional electrician in this matter.
- Never expose the product to direct sunlight or rain, etc. Never use the product in humid conditions.
- Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner. Never use the product close to combustibles.
- Do not wash the body of the grinder under running water or immerse it in water.

- Do not operate the Coffee Grinder with an empty hopper or tank. Add coffee beans before use. Do not overfill the hopper or tank.

# SAVE THESE INSTRUCTIONS

## OVERVIEW OF PARTS

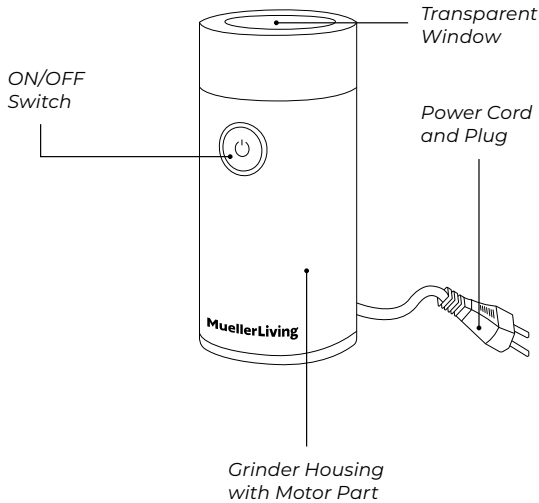

## EASY STEPS

**STEP 1**

Rotate to open the lid.

**STEP 2**

Put coffee beans inside the stainless steel hopper.

**NOTE:** Scoop not included.

**STEP 3**

Close the lid.

**STEP 4**

To operate, press and hold the start button for up to 20 seconds. Release when done.

**STEP 5**

Open lid. Pour out the ground powder. It's now ready for coffee brewing.

## ■ INSTRUCTIONS FOR USING THE COFFEE GRINDER

1. Do not to overload the unit. Do not fill coffee beans beyond the brim of the unit.
2. To start the Coffee Grinder, fill the coffee chamber with coffee beans, place and lock the transparent window lid on the body. Plug in the Grinder. Push and hold the ON/OFF switch. To stop, simply release the ON/OFF switch.
3. It is recommended not to grind for more than 20 seconds. Longer operation does not result in a finer grind but will overheat the coffee and can create a loss of aroma. Use chart below, to reach your desired grind consistency.
4. After grinding coffee, remove the transparent lid from the motor part and pour out the coffee grounds.
5. For optimal flavor, it is recommended to grind coffee beans immediately before brewing.



**Coarse Grind**  
French Press & Percolator



6–8 Seconds



**Medium Grind**  
Automatic Drip Coffee



10–12 Seconds



**Fine Ground**  
Espresso Machine  
& Turkish Coffee



14–16 Seconds

**NOTE:** Grinds fresh beans for better aroma and higher quality coffee. Pre-ground beans will keep their aroma for 7–8 days. Coffee stored in a sealed container, in a cool place, may retain its aroma longer. Do not store ground coffee in fridge or freezer.

## ■ CLEANING AND MAINTENANCE

- Always unplug the unit before cleaning.
- The transparent lid can be washed by hand with mild soap and water; do not clean it in the dishwasher.
- The grinding area in the bowl should be cleaned with a small brush. **DO NOT IMMERSIVE IN WATER.**
- Wipe the Grinder with a damp cloth only.

## ■ SPECIFICATIONS

| Model Number | Voltage      | Power |
|--------------|--------------|-------|
| HB-150       | 120 V~ 60 Hz | 150 W |

## ■ 1-YEAR LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for one year from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.

If there is any problem with MuellerLiving Coffee Grinder, please contact Customer Service.

[MUELLERDIRECT.COM](https://www.muellerdirect.com)  
[SUPPORT@MUELLERDIRECT.COM](mailto:SUPPORT@MUELLERDIRECT.COM)

# MuellerLiving™

## DESIGNER COFFEE GRINDER

QUICKLY GRIND FRESH COFFEE

SKU:

MLR010560N

MLR010561N

MLR010562N

MADE IN CHINA

---

HAPPINESS IS HOMEMADE

MUELLERDIRECT.COM  
SUPPORT@MUELLERDIRECT.COM

350 SPRINGFIELD AVENUE,  
SUITE #200, SUMMIT,  
NJ 07901